

TO RELOCATE wrightway2MT INDUSTRIAL TIPPER

ALWAYS have 2 operators to move the machine.

Ensure all pathways are level and clear of debris, obstacles, and personnel. Check for over-head hazards.

1: ACTIVATE

Insert key, turn key ON.



2: LIFT CRADLE

Press and hold LIFT button (See Left)

Cradle needs only to be lifted a little above ground level to allow free movement (See Below)



3: RELEASE BRAKES

Release wind-down rear brakes.

Whilst holding side handles, release braked castors.

DOWN = LOCKED
LIFT UP = RELEASED



4: RELOCATE

Using side handles provided, push or pull machine to required location.



DO NOT PUSH ON DOOR - USE SIDE HANDLES WHEN MOVING THE MACHINE.

5: SECURE

Locate the machine in position against skip if it is to be used, or safely located for storage if not to be used.

Lower cradle to ground (electronic sensors must be aligned before the doors will open).



If the machine is not to be used immediately, turn key to OFF, remove key and return the key to a secured location.